


GREASING SPEEDPLAY PEDAL BEARINGS


THE SPEEDY-LUBER & GREASE GUN ARE AVAILABLE AT YOUR LOCAL SPEEDPLAY DEALER

Warning - Use Waterproof Grease Only. Spray or liquid lubes such as oil, Tri-Flow, WD-40 etc., may cause permanent damage. Speedplay recommends Sta-Lube Marine Grease available from Speedplay. Lubricate as needed. Parts damaged from lack of lubrication are not covered under Speedplay's warranty.

Greasing X, Zero & frog Series Pedals

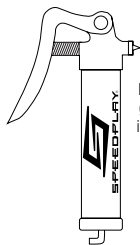

Needle
grease
injector
gun *
Part #
13175

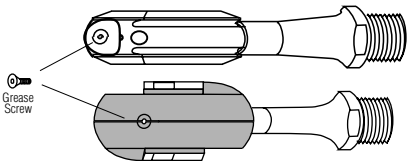


USING THE BUILT-IN GREASE PORT

Instructions for quick and easy pedal maintenance


1. Remove the Grease Port Screw with a #1 Phillips screw driver
2. Insert needle-type grease injector gun into grease port hole.
3. Pump gun slowly while turning pedal body slowly until clean grease is visible at spindle end of pedal body.
4. Wipe off excess grease and reinstall Grease Port Screw.

Note - Overtightening screw may strip the dust cap threads.

Greasing Older Style X/1, X/2 Pedals

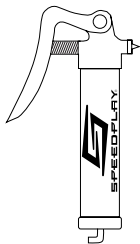

Needle
grease
injector
gun *
Part #
13175

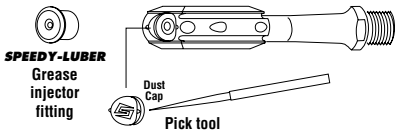

SPEEDY-LUBER Greasing instructions

1. Remove dust cap by prying under side tabs with sharp pick.
2. Insert grease injector fitting into pedal.
3. Insert needle-type grease injector gun into grease fitting.
4. Turn pedal while pumping gun until clean grease is visible at spindle end.
5. Wipe off excess grease and reinstall dust cap.

*Also Includes Hydraulic Coupler (Zerk) Fitting